

CHARGING & SAFEGUARDS

Both batteries have been inspected and have an approximate 20% charge from the factory. We recommend applying a full charge before use.

- 1) Plug the wall charger into a standard 110V polarized directional outlet.
- 2) A battery can be fully charged in approximately five to six hours.
- 3) Use the battery indicator located on the battery to check the charge status. The unit will shut off when fully charged. 

⚠ WARNING: IMPORTANT SAFETY INFORMATION

Do not modify the plug in any way. When using electrical appliances, basic safety precautions should always be followed including the following:

- A.) Read all instructions.
- B.) To protect against risk of electrical shock do not put this appliance in water or other liquid. Do not operate knife in water or under running water.
- C.) This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- D.) Turn the appliance "OFF", then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord. Permanently Installed – Make sure appliance is "OFF" when not in use, before putting on or taking off parts, and before cleaning. Disconnect when changing blades.
- E.) Avoid contacting moving parts.
- F.) Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
- G.) The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- H.) Do not use outdoors.
- I.) Do not let cord hang over edge of table or counter or touch hot surfaces.
- J.) Do not let cord contact hot surface, including the stove.
- K.) REMOVE BLADES BEFORE AND/OR DURING CHARGING. DO NOT USE WHEN CHARGING.
- L.) Do not touch surfaces that may be hot. Use handles or knobs provided.
- M.) Do not place on or near a hot gas or electric burner or in a heated oven.
- N.) Do not use appliance for other than intended use.
- O.) Avoid contacting moving parts.
- P.) Blades are sharp. Handle carefully. Always handle blades with hand away from cutting edge. Always store blades with cutting edge away from you.
- Q.) Carefully route the power supply cord to avoid damage from the knife blades.
- R.) SAVE THESE INSTRUCTIONS.

BUBBA™

LITHIUM ION ELECTRIC FILLET KNIFE LIMITED WARRANTY

THIS BUBBA™ PRODUCT IS WARRANTED TO BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP FOR A PERIOD OF ONE (1) YEAR FROM THE DATE OF MANUFACTURE OR, UPON PRESENTMENT OF A DATED SALES RECEIPT, FROM THE DATE OF ORIGINAL RETAIL PURCHASE.

TO REGISTER YOUR PRODUCT AND FOR COMPLETE WARRANTY TERMS AND CONDITIONS PLEASE VISIT:

WWW.BUBBALADE.COM/PAGES/RETURNS-AND-WARRANTY
OR CONTACT BUBBA™ AT THE ADDRESS / TELEPHONE NUMBER BELOW.

FOR WARRANTY SERVICE CALL CUSTOMER SERVICE AT:
1-844-486-7265, OR EMAIL CUSTOMERSERVICE@BUBBALADE.COM
FOR A RETURN AUTHORIZATION NUMBER (RMA).



1800 North Route Z
Columbia, MO 65202
www.aob.com



HERE'S ALL THE
INFORMATION
YOU'LL NEED
FOR WHEN
YOU'RE READY
TO PURCHASE
REPLACEMENT
BLADES:



7"

7" E-FLEX REPLACEMENT BLADE // PRODUCT #1099591



9"

9" E-FLEX REPLACEMENT BLADE // PRODUCT #1099592



9"

9" E-STIFF REPLACEMENT BLADE // PRODUCT #1099593



12"

12" E-STIFF REPLACEMENT BLADE // PRODUCT #1099594



WARNING: BLADES ARE SHARP AND POTENTIALLY DANGEROUS. ALWAYS KEEP IN A SAFE PLACE AWAY FROM CHILDREN. ONLY USE FOR INTENDED PURPOSE. CUT AWAY FROM BODY WHEN USING.




WARNING: CANCER AND REPRODUCTIVE HARM –
WWW.P65WARNINGS.CA.GOV

BUBBA™

LITHIUM ION ELECTRIC FILLET KNIFE INSTRUCTION BOOKLET

MODEL: 1095705

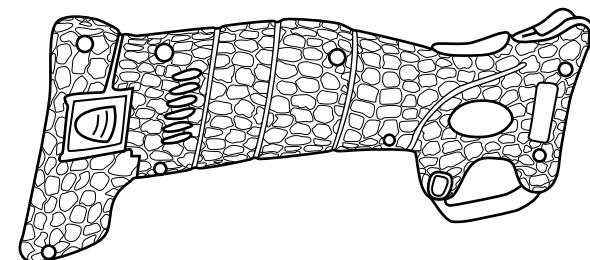


COMPATIBLE BLADE SIZES



7"



 9"



9"



12"

WELCOME TO THE

ultimate LIFESTYLE

www.bubbablade.com     @BUBBA

#bubba #theultimatelifestyle #bubbahooked #watertoplate

INSTRUCTION #1106308 REV. C

SAVE THESE INSTRUCTIONS


- THIS APPLIANCE IS ETL LISTED.
- THERE ARE NO USER-SERVICEABLE PARTS INSIDE. SERVICING SHOULD ONLY BE DONE BY AN AUTHORIZED SERVICE FACILITY (SEE WARRANTY).
- THE MOTOR AND GEARS NEVER NEED LUBRICATION.

BLADE INSTALLATION, HANDLING AND CARE

⚠️ WARNING:

⚠️ **WARNING:** USE EXTREME CAUTION WHEN HANDLING A BUBBA™ BLADE. ALWAYS UNPLUG THE BUBBA™ FILLET KNIFE PRIOR TO INSERTING AND REMOVING THE BLADES.

1. WASH BLADES BEFORE INITIAL USE WITH SOAP AND WATER.
2. CHOOSE AN APPROPRIATELY SIZED BLADE FOR YOUR CATCH.

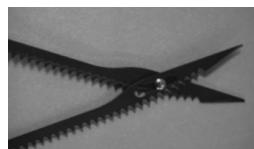

3. ASSEMBLE THE BLADES BY CONNECTING THE RIVET GUIDES AND THEN POSITION THE BLADES PARALLEL TO ONE ANOTHER.
4. CAREFULLY GRIP THE ASSEMBLED BLADE BY THE FINGER GUARD AND OPPOSITE THE CUTTING EDGE.
5. KEEP THE PALM ON THE DULL SIDE OF THE BLADE AND THE FINGERS AWAY FROM THE SHARP EDGE.



6. ALIGN THE REAR BLADE TANGS AND INSERT INTO THE FILLET KNIFE HANDLE BODY.



7. ONCE INSTALLED, THE BLADE RELEASE LEVER SHOULD REMAIN AT THE MOST FORWARD POSITION OF THE HANDLE.

BLADE REMOVAL

⚠️ WARNING:

1. HOLD THE HANDLE IN ITS NATURAL FORM WITH ONE HAND AND GRIP THE FINGER GUARDS FROM THE NON-SHARPENED SIDE OF THE BLADES WITH THE OTHER.



2. SLIDE THE BLADE RELEASE AWAY FROM THE BLADES AND GENTLY REMOVE THE BLADES.

FILLET YOUR CATCH

⚠️ WARNING: SHARP BLADES


- NOW THAT YOU HAVE INSERTED YOUR BLADE OF CHOICE, YOU CAN PLUG THE KNIFE IN FOR USE. ONLY USE A 110V OUTLET.

⚠️ **WARNING:** ELECTRICAL SHOCK OR FIRE CAN OCCUR AT ANY TIME IF HANDLE BECOMES WET. THIS PRODUCT IS DESIGNED FOR SAFE USE WITH 110V POLARIZED DIRECTIONAL OUTLETS ONLY. MODIFYING THIS PRODUCT FOR USES OTHER THAN ITS INTENDED PURPOSE WILL VOID WARRANTY.

1. PLACE YOUR CATCH ON A CUTTING BOARD OR SUITABLE SURFACE FOR CLEANING FISH.
2. SWITCH THE TRIGGER LOCK INTO THE "ON" POSITION.



3. HOLD YOUR CATCH WHILE LIFTING THE PECTORAL FIN, BEGIN TO POWER THROUGH THE CATCH UNTIL YOU REACH THE SPINE.

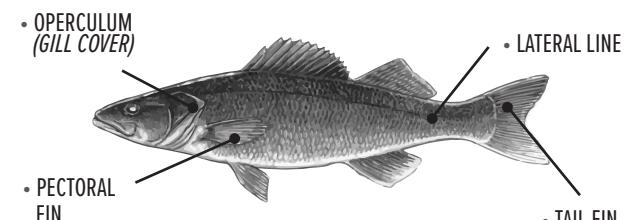

4. TURN THE BLADE 90° AND WHILE MAINTAINING THE BLADE AT THE LATERAL LINE OF THE FILLET, POWER DOWN TOWARDS THE TAIL FIN, BUT DO NOT CUT THROUGH IT.
5. ONCE WITHIN A 1/4" OR SO FROM THE TAIL FIN, USE THE BLADE TO FLIP THE FILLET AWAY FROM THE CATCH.
6. ANGLE THE BLADE SLIGHTLY TOWARDS THE OUT SKIN AND POWER THROUGH THE FILLET.
7. ONCE THE FILLET HAS BEEN REMOVED FROM THE SKIN, USE THE TIP OF THE BLADE TO REMOVE THE RIB CAGE.
8. TURN CATCH OVER, REPEAT-COOK-N-EAT. 

CLEANING

BLADES

⚠️ **WARNING:** USE EXTREME CAUTION WHEN HANDLING A BUBBA™ BLADE. ALWAYS UNPLUG THE BUBBA™ FILLET KNIFE PRIOR TO CLEANING, INSERTING OR REMOVING THE BLADES.

1. ONCE THE FILLET KNIFE HAS BEEN UNPLUGGED, HOLD THE HANDLE IN ITS NATURAL FORM WITH ONE HAND AND GRIP THE FINGER GUARDS OPPOSITE THE CUTTING EDGE WITH THE OTHER.
2. SLIDE THE BLADE RELEASE TOWARDS THE HANDLE AND GENTLY REMOVE THE BLADES.
3. HOLD EACH BLADE BY THE TANG EXTENSION AND CAREFULLY WASH WITH SOAP AND WATER.
4. RINSE AND DRY BEFORE STORING.

HANDLE

⚠️ **WARNING:** ALWAYS UNPLUG THE BUBBA™ FILLET KNIFE PRIOR TO CLEANING. NEVER SUBMERGE THE HANDLE IN WATER OR ALLOW THE HANDLE TO MAKE CONTACT WITH WET SURFACES. THIS COULD CAUSE ELECTRICAL SHOCK OR FIRE.

1. USE A WARM, DAMP CLOTH WITH A SMALL AMOUNT OF MILD SOAP TO CLEAN ALL SURFACES OF THE KNIFE HANDLE.
2. ONCE FINISHED, USE A CLEAN, DAMP CLOTH TO DRY.