

COTTON

All 1-2 Camera & Binocular Harness Instructions

Thank you for your purchase of a CCS G3 Harness, our best in class designs do not compromise fit, functionality or form. Our goal is single minded, to provide secure camera carrying systems that free your hands, keep your equipment safe and your body mobile, Ready To Shoot Now!



1. Fit the **Camera Harness** by pulling the **Speed Straps** EVENLY, ensuring the unit is tightened snugly on your body. Harness rests mid torso as shown.



2. Use the **Shoulder Tightening Straps** to ensure the Harness is snug and comfortable. Balance with waist to ensure the weight of your camera is distributed evenly.



3. **The Shoulders** are adjustable from the inside. Larger or shorter individuals can take off the Harness and re-adjust the velcro straps to what's comfortable.



4. Ensure you align the arrow of the **Camera Hub** in direction of the lens.




CAREFUL: putting the arrows the wrong way will put your camera at risk of falling out of the Harness.



5. Insert the **Camera with Camera Hub** at **90 Degrees** into the Harness Receiver. Resting with the lens down the camera will lock in with our **Patented Twist& Lock System**.

Patented Twist& Lock System

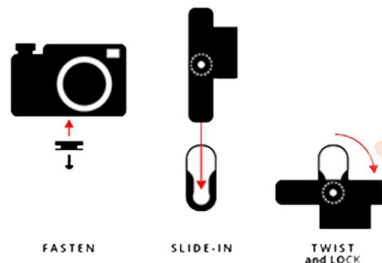

6. Attach the **Side Holster** to the Camera Harness using the **Velcro Wraps**. Alternatively, you can attach the **Side Holster** to your belt or the waist strap of your backpack.



7. Attach the **Camera Tethers** from the Camera Harness **D-Rings** to the **Eyelets** on your camera.

COTTON

If you have and questions or comments feel free to call or email us @

Sam@cottoncarrier.com

1-877-852-9423

www.cottoncarrier.com