

THRU-HIKER 100


Assembly Instructions

PACKAGE INCLUDES:

Tent body, stakes


1 PREPARE FOR SETUP

1. With MSR logo facing up, spread wing into a rectangle and stake out about 3' from corners.

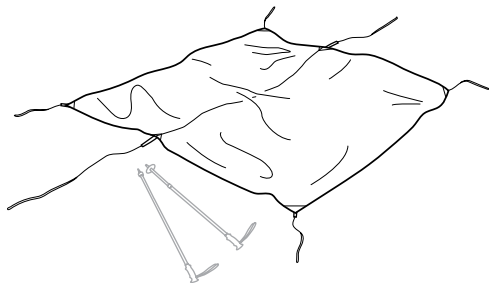


2 INSERT POLE

1. Insert tip of trekking pole into red grommet.
2. Stake center cord about 6' from wing.

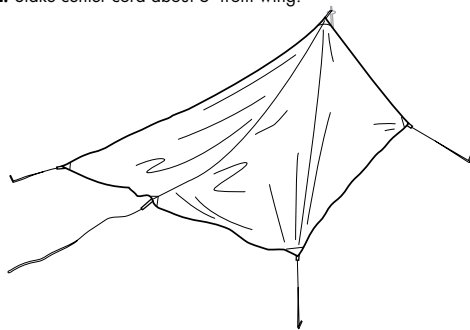


3 ADJUST TENSION

1. Insert front pole, and if necessary, adjust stake position to create even tension across wing.

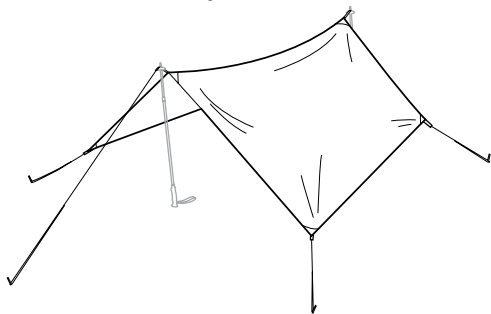

4 OPTIONAL SETUP

1. Set up with MSR accessory poles.
2. Suspend from tree to eliminate need for poles.

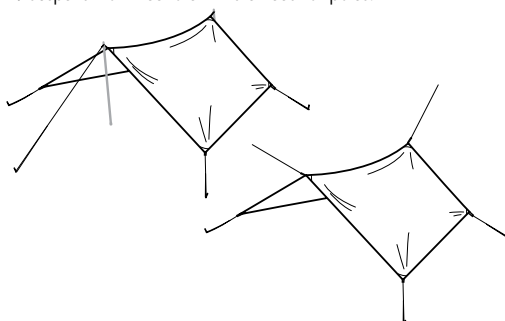

For complete care and use instructions, refer to the Owner's Manual (available at www.msrgear.com/Thru-Hiker 100 Wing).



MOUNTAIN SAFETY RESEARCH®

© 2016 Cascade Designs, Inc.
4000 First Avenue South
Seattle, WA 98134 USA
1-800-531-9531 | 1-206-505-9500