

Quick Start Guide

Fish-Scout® **BASE CAMP**

Underwater Camera with HDMI interface



Thank you for purchasing the Vexilar Fish-Scout® Base Camp underwater camera system. Please read this quick start guide carefully before using.



Warning


- Keep camera, bag and all cables away from children
- Keep cables away from ice augers or other sharp objects
- Keep Base Camp control box out of water and away from water
- Keep control box, camera and cables away from heater(s) and heat-emitting sources
- Do not store in a damp area
- Do not store in an area that gets over 110° or under -30° Fahrenheit

What's included:

- HD camera with temperature and direction, plus viewing angle adjustment
- Control box with HDMI video out
- 50-foot camera cable with depth marks
- Cable management spool with rubber stopper
- Over-hole suspension arm with built-in compass
- 5V 2A power cube adapter
- 10' USB-A to USB-C power cable
- 10' HDMI weatherproof cable
- Protective soft pack carry case with strap
- Stainless steel mounting screws

Connections:


- Mount or secure the Base Camp control box within 10 feet of a power source. *Mounting or clamping the box to a surface is recommended so it cannot be pulled into the ice hole.*
- Connect the camera cable to the camera in jack on the Base Camp control box.
- Plug the AC to DC adapter cube into a power source and connect the USB power cable to the adapter cube and the Base Camp control box.
- Connect the HDMI cable to the Base Camp control box and the HDMI input on your TV or monitor.
- Using the controls on your TV or monitor, switch the input to the HDMI port you just connected.

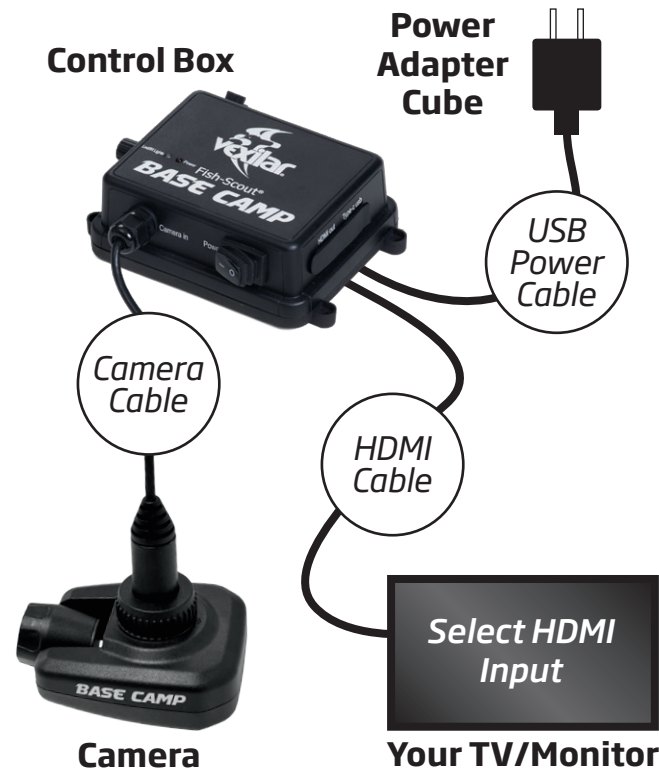

Operation:

- Turn the **SYSTEM ON** with the switch on the control box.
- Set the **CAMERA LIGHTS** using the knob on the side of the Base Camp control box.

LED lights: turn counterclockwise to desired brightness: Low, Medium or High.

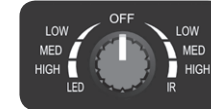

IR lights: turn clockwise to desired brightness: Low, Medium or High.

- Set the **VIEWING ANGLE** by moving the camera to one of five positions.
- Calibrate the **COMPASS** (the control box must be ON):
 - Place a magnet onto the top of the Control Box in the area just above the indicator lights. A magnet is supplied in the flap of the soft pack, or you may use a similar magnet.
 - The Power Indicator light will begin flashing.
 - Spin the camera clockwise until the Power Indicator light stops flashing and returns to solid.

