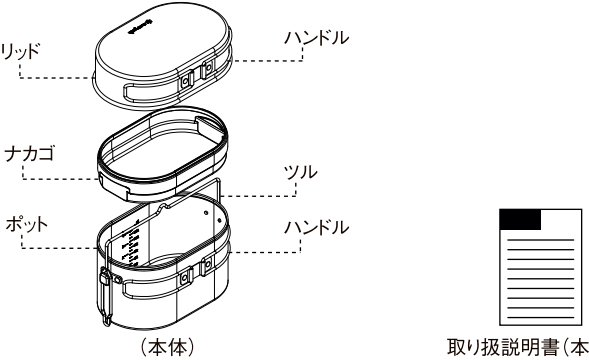


## SCS-250 ワッパークッカー

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、アルミ製の調理用器具です。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点および製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

| セット内容 (各部の名称)                                                                     | スペック                                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <ul style="list-style-type: none"><li>●材質:リッド、ナカゴ、ポット、耳金／アルミニウム(アルマイト加工)、ハンドル、ツル／ステンレス鋼</li><li>●サイズ:リッド／201×135×50(h)mm、ポット(ツル、耳金含む)／218×127×102(h)mm、ナカゴ／189×120×40(h)mm</li><li>●収納サイズ:218×135×143(h)mm</li><li>●重量:580g</li></ul> |

**安全上の注意事項** ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

|                                                                                                                                                                                                                                                      |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>⚠ 危険</b> 明らかに生命に関わる重大な事故が予測される行為を示します。</p> <ul style="list-style-type: none"><li>●本製品を使用する前に必ず燃焼器具の取扱説明書をよく読み、対応機種をご確認のうえ注意事項にしたがってご使用ください。誤った使用方法是火災ややけどなどの重大事故につながります。</li><li>●ストーブの上では絶対に使用しないでください。本体の転倒や異常加熱などによるやけどのおそれがあります。</li></ul> |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>⚠ 警告</b> 取扱いを誤った場合、使用者が死亡または重傷を負う可能性があることを示します。</p> <ul style="list-style-type: none"><li>●ご使用前に、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。</li><li>●小さなお子様だけで使用させたり、手の届く範囲に置かないでください。思わぬ事故の原因になります。</li><li>●空焚きは絶対にしないでください。異常高温になり製品が変形したり、火災につながります。</li><li>●本製品で燻製をつくることはできません。製品が変形したり、火災につながります。</li><li>●本製品を火にかける際は、必ず厚手の手袋や鍋つかみを使用し取り扱ってください。ハンドル部や本体、ツルが高温になりやけどします。</li><li>●本製品をガス機器にて加熱する際は炎が鍋底より外に出ないように調節してください。はみ出た炎により取っ手などが異常加熱され変形、破損のおそれがあります。</li><li>●傾斜地で使用すると燃焼器やテーブルの上から滑り落ち大変危険です。ご使用の際は、ご使用になるテーブルや燃焼器を含め、なるべく地面と水平な場所でお使いください。</li><li>●急激な温度変化が起きると変形するおそれがあります。調理後高温になった本体に冷水をかけたり、雪の上に置かないでください。</li></ul> |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>⚠ 注意</b> ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。</p> <ul style="list-style-type: none"><li>●お使いになる前に必ず中性洗剤とやわらかいスポンジで洗ってください。</li><li>●スコッチなど固いスポンジでこするとキズが入ったり、アルマイトが色落ちします。</li><li>●本製品に料理を長時間保存しないでください。</li><li>●焚火や炭火で使用する場合は、遠火になるように火力や本体との距離を調整しながらご使用ください。また、蓋に高温になった薪や炭などを置かないでください。</li><li>●アルミ材質のため、熱が強すぎると変形や破損のおそれがあります。</li><li>●ハンドルは使用中に外れにくいようデザインされていますが、必ず固定していることを確認し、しっかりと握ってご使用ください。</li><li>●本体内に他の製品をスタッキングして携行する場合、表面のアルマイトがはがれるおそれがあります。スタッキングする際は本体内部をやわらかい布で覆うなど、本体に傷がつかないように十分ご注意ください。また、サビやすいものは入れないでください。本製品にサビが移り変色します。</li></ul> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### 使用方法


#### ■本体の使用方法

- 本製品の取扱説明書をよく読み、それぞれの調理に適した方法で調理を行ってください。
- ポットの内側に炊飯用の目盛線があります。お好みに合わせて水量を調節してください。(最大炊飯容量:4合)

#### ■ポットでの炊飯方法

**⚠ 注意** ●設置面が必ず水平になっていることを確認してください。傾いているとうまく炊飯できません。

- ①炊飯したい量に応じてお米を測ってください。
- ②お米を研ぎ終わったら、研いだお米はそのままにし、入れたお米の量に応じて目盛りの位置まで水を注いでください。
- ③お米を浸水させた後、リッドを被せ火にかけて炊飯してください。

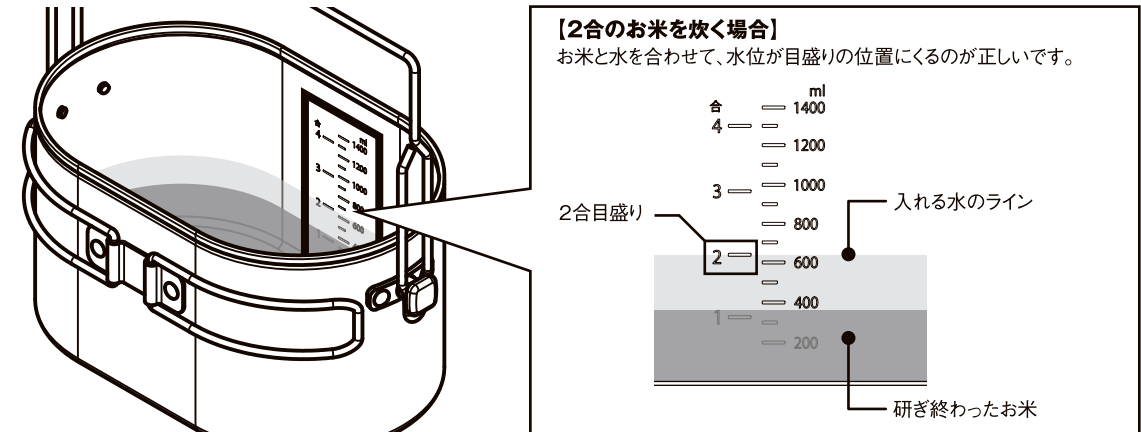


#### ■ナカゴでの炊飯方法

ナカゴで炊飯する際ポットにて汁物料理が同時にできます。※ナカゴでは1合まで炊飯できます。


- ①～②はポットでの炊飯方法と同じです。
- ③その後、そのままこぼれないようにナカゴに移して、浸水させてください。
- ④ポットに多めの水を入れ汁物の具材などをいれてください。その後、ナカゴを乗せ、リッドを被せたら火にかけてお湯を沸かし、ナカゴで炊飯してください。

**⚠ 注意** ●ポットに入れる水が少ないと空焚きになるおそれがありますので水はあふれない程度に多めに入れてください。  
●汁物料理と炊飯を同時に行くとお米に汁物の匂いが移る可能性があります。あらかじめご了承ください。

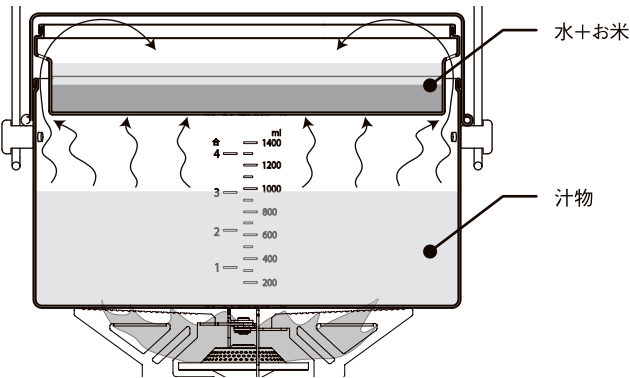

**⚠ 警告** ●屋外で本製品を使用する際、風などによって燃焼器の炎の立ち消えが発生する場合があります。ご使用の燃焼器具の火が消えていないことを常に確認してください。また、屋内であっても火が消えていないことをご確認ください。思わぬ事故につながります。

**⚠ 注意** ●ハンドルや吊り手をつかむ際は必ずファイヤーサイドグローブなどの鍋つかみを使用し取り扱ってください。

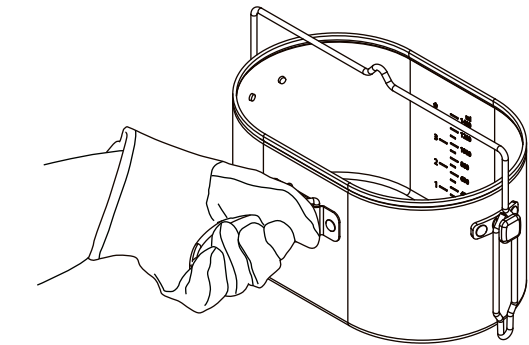

#### ■レクタストーブとOD缶収納方法

●OD缶とレクタストーブを一緒に収納する際は一番下にレクタストーブを置き、その上にOD缶を入れてください。ナカゴをひっくり返しポットに被せることで、OD缶も収納できます。

### メンテナンスについて

- 長期間ご使用しなかった製品を再度お使いになる際は、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。
- ご使用後は製品に付着した汚れをスポンジに中性洗剤をつけて洗ってください。拭き取った後は十分乾燥させてください。
- アルカリ性、酸性の洗剤を使用しないでください。シミやアルマイトのはがれにつながります。
- 食器洗浄機や乾燥器は使用できません。
- つけ置き洗いはしないでください。変色につながります。

### 品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。

- |                          |                               |
|--------------------------|-------------------------------|
| 1. 素材の経年劣化による損害など商品の寿命   | 6. ゴミやさびによる故障                 |
| 2. 改造および粗雑な取扱いによる故障      | 7. 分解したことによる不具合の発生または破損       |
| 3. 取扱説明書で禁止されている取扱いによる故障 | 8. 落下やその他の衝撃による部品の変形や破損による不具合 |
| 4. 不測の事故による商品の故障         | 9. 摩擦によるパーツの変化及びそれによる故障       |
| 5. その他製造上の欠陥以外による製品の故障   | 10. 他社製品との組み合わせによる故障          |

### 修理について


- 本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。
- 修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。
- 修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。
- 修理品の運賃並びに修理費については以下のように規定させていただきます。
  - 1.保証対象の場合：往復運賃並びに修理費は弊社にて負担いたします。
  - 2.保証対象以外の場合：往復運賃並びに修理費は、お客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、**スノーピークユーザーサービス**  
販売店様または弊社ユーザーサービスまで  
お問い合わせください。  
☎0120-010-660 (9:00～17:00)  
Email:userservice@snowpeak.co.jp

株式会社スノーピーク  
〒955-0147 新潟県三条市中野原456  
Tel. 0256-46-5858 / Fax. 0256-46-5860  
www.snowpeak.co.jp

## SCS-250 Wapper Cooker

Thank you for purchasing a Snow Peak product. This product is an aluminum cooking tool for camping. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.
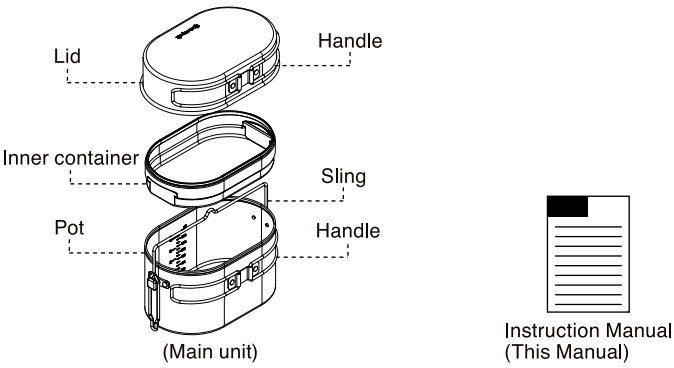
| Contents (Name of the Parts)                                                      | Specifications                                                                                                                                                                                                                                                                                                                                         |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <ul style="list-style-type: none"><li>●Materials: alumite-treated aluminum (lid, inner container, fittings) and stainless steel (handle, sling)</li><li>●Size: Lid / 201×135×50(h)mm, Pot (including sling and fittings) / 218×127×102(h)mm Inner container / 189×120×40(h)mm,</li><li>●Storage Size: 218×135×143(h)mm</li><li>●Weight: 580g</li></ul> |

### Safety Precautions: Before use, please read thoroughly to ensure safety and avoid accidents.

 **DANGER / Misuse could easily result in a serious accident or death.**

- Before using this product, carefully read the instructions for the burner and ensure that this product is compatible and follow the precautions. Incorrect use may lead to fire and/or burns and other serious accidents.
- Do not use this product on a stove. It may cause this product to fall or lead to burns from excessive heat.

 **WARNING / Misuse could result in serious injury or death.**

- Before using the product, check each part for abnormalities.If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.
- Do not allow young children to use this product without supervision or place this product within reach of young children. It can lead to unexpected accidents.
- Do not heat this product while it is empty. Doing so causes overheating, which leads to deformation of this product and/or fire.
- This product is not intended for smoking foodstuff. It can cause deformation of this product and/or fire.
- When putting this product over fire, always wear thick gloves or use oven mittens for handling. The handle, main unit, and sling are very hot and can cause burns.
- When heating this product with gas equipment, adjust the heat so that the flames stay under the pot. Any flame swaying out of underneath the pot may excessively heat the handle or other parts, which can result in deformation or damage.
- Using this product on a tilted surface may cause it to slide off the burner or table, creating great danger. When using this product, ensure that it (and the table or burner it is placed on) is on a surface that is or is close to level with the ground.
- Rapid temperature change may cause deformation. Do not splash cold water on the main unit or place it on snow right after taking it off the heat.

 **CAUTION / Misuse could result in injury to the user and/or damage to property.**

- Always wash this product with mild detergent using a soft sponge before use.
- Scrubbing with Scotch or other hard sponge causes scratches and the alumite to fade in color.
- Do not store food in this product for a long period of time.
- When using this product over campfire or charcoal, adjust the heat and the distance between this product and fire to keep sufficient distance while heating. Do not place hot firewood or coal on the lid. Since the lid is made of aluminum, strong heat can cause deformation or damage.
- While the handle is designed to stay in place during use, always make sure that it is tight and use with a firm grip.
- Stacking other products inside the main unit for carrying may cause the alumite coating to peel off. When doing so, cover the inside with a soft cloth or take other measures to prevent scratches to the main unit. Do not put anything that is prone to rusting. The rust can transfer to this product and result in discoloration.

### Instructions for Use


#### ■How to use this product

- Read the instructions for this product and use a cooking method appropriate for each cooking application.
- The inside of the pot has scales for cooking rice. Adjust the amount of water according to your preference. (Max. rice-cooking capacity: four cups)

#### ■Cooking rice in the pot

 **CAUTION** ●Make sure that this product is placed evenly on a flat surface. If the pot is tilted, it may not cook the rice properly.

- ①Measure the rice according to the amount you want to cook.
- ②After rinsing the rice, drain the water, leaving the rice inside, and pour water up to the scale corresponding to the amount of rice.
- ③After soaking the rice, put the lid on the pot and heat it over fire to cook the rice.

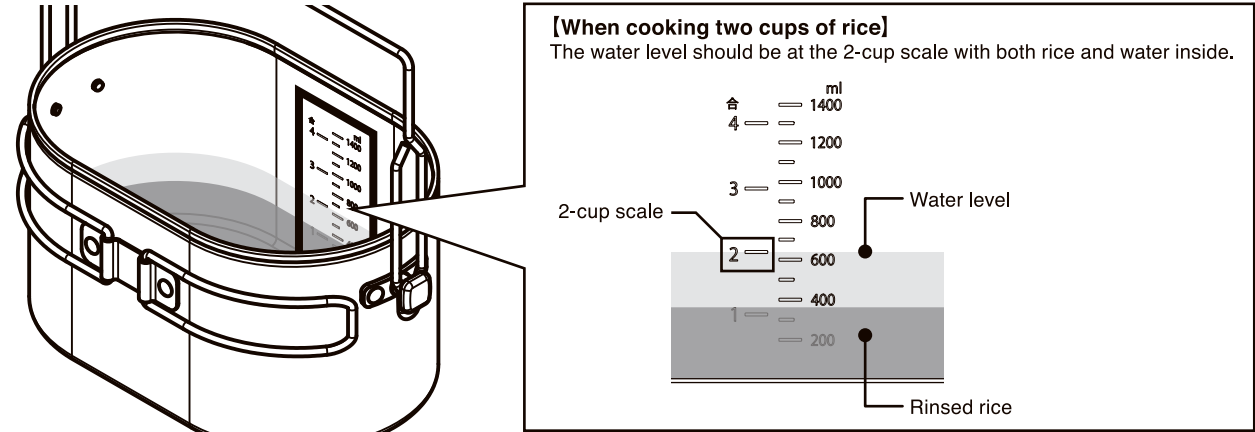

#### ■Cooking rice in the inner container


By using the inner container for cooking rice, you can also cook soup in the pot at the same time.

\*You can cook up to one cup of rice in the inner container.

- Steps ① and ② are the same as when cooking rice in the pot.
- ③ Transfer the rice and water to the inner container and allow the rice to soak.
  - ④ Pour water into the pot and put in some soup ingredients.Then, place the inner container over the pot and cover with lid. Put this product over heat to boil the water and cook the rice in the inner container.


 **CAUTION** ●Make sure you put enough water inside the pot (do not put too much that it overflows), so that you do not heat it empty.

- Please note that cooking rice and soup at the same time may cause the smell of soup to transfer to the rice.

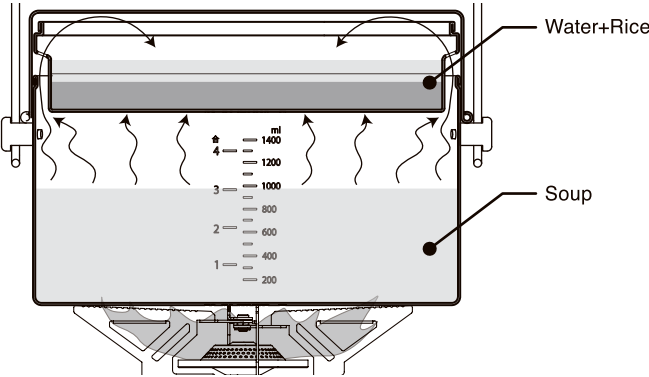

 **WARNING** ●When using this product outdoors, fire of the burner may be blown out due to wind or other causes. Check from time to time to make sure that the fire of the burner has not extinguished. Also check that the fire is not out during indoor use. Otherwise, unexpected accidents may occur.

 **CAUTION** ●When holding the handle or sling, always use fireside gloves or oven mittens for handling.

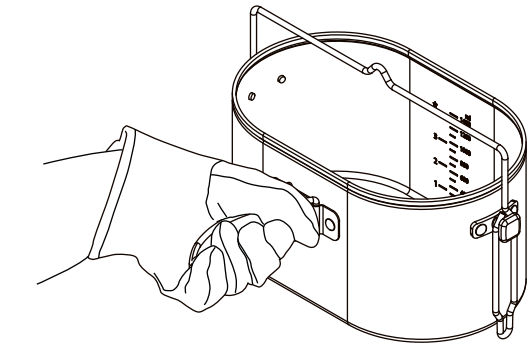

#### ■Storing the Recta stove and OD can

- When storing the OD can and Recta stove together, place the Recta stove at the very bottom and put the OD can on top. You can make space for the OD can by turning over the inner container and placing it over the pot.

### Maintenance

- Before using a product that has been in storage for a long time, check each part for abnormalities. If there are abnormalities, take the product to the retailer or contact Snow Peak Customer Service for inspection or repair.
- Clean this product after use by washing it with mild detergent using a sponge. Dry well after wiping.
- Do not use acidic or alkaline detergent. It can cause staining or peeling of the alumite coating.
- This product is not dishwasher-proof or dryer-proof.
- Do not soak this product for washing. It can cause discoloration.

### Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following:

- |                                                                               |                                                                                                 |
|-------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| 1. Material deterioration caused by age                                       | 6. Damage caused by dust or rust                                                                |
| 2. Damage caused by modifications or rough handling                           | 7. Damage and defects caused by dismantling the product                                         |
| 3. Damage caused by inappropriate use not mentioned in the instruction manual | 8. Damage and defects caused by dropping, jolting or other shocks                               |
| 4. Damage caused by unexpected accidents                                      | 9. Deterioration or failure of parts due to friction                                            |
| 5. Any damage other than defects in the manufacturing process                 | 10. Damage caused by the use of the product in combination with another manufacturer's products |

### Repair

- If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service.
  - When you request repairs, please make sure that the product is dry and clean.
  - Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred.
  - Transportation and repair costs are determined as follows.
1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak.
  2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.