




WeatherTech® WindshieldFone™

Installation Video


Contents: Telescopic Arm, Short Arm, Medium Arm, Bumper

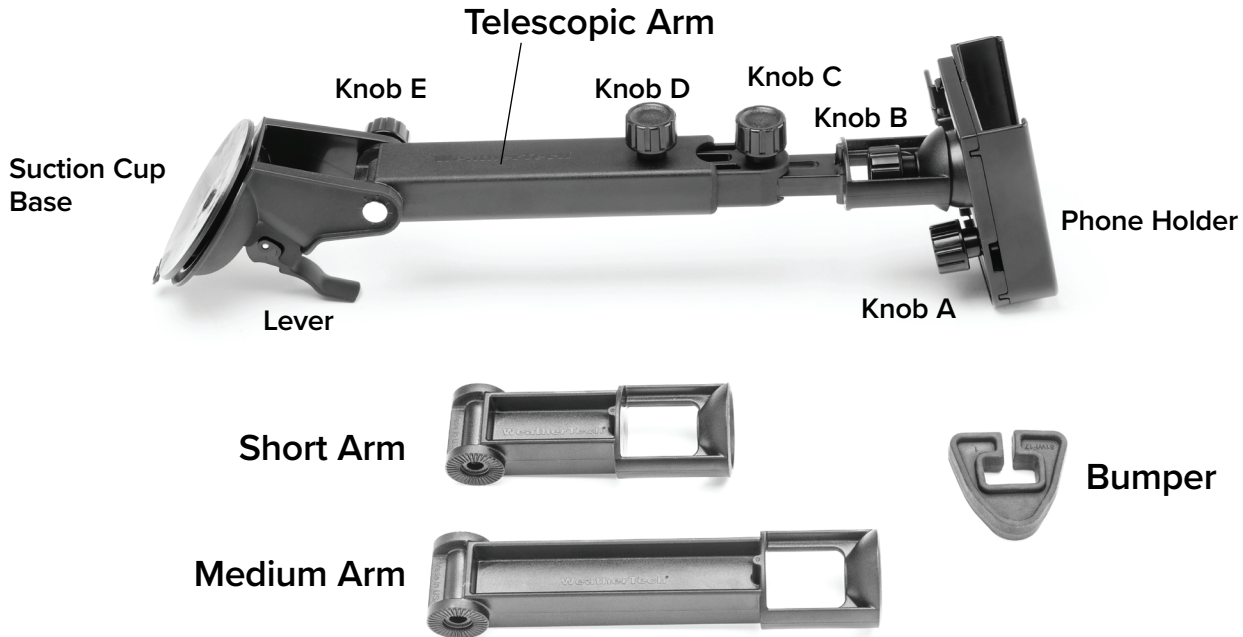


Note distance between the windshield and the front of your dashboard. Choose the best-fitting arm length: Short, Medium or Telescopic (already attached).



SCAN HERE to view How-To videos for swapping in shorter arms and flipping the base.

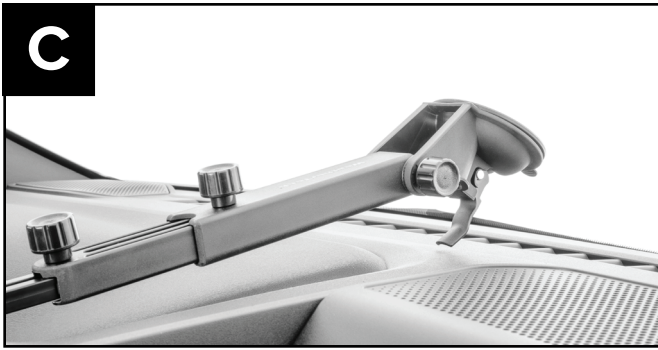

After cleaning windshield with alcohol wipe, position the suction cup base in a preferred location, hold in place and extend the arm by loosening knobs C, D and E. The lever should be in the release position.

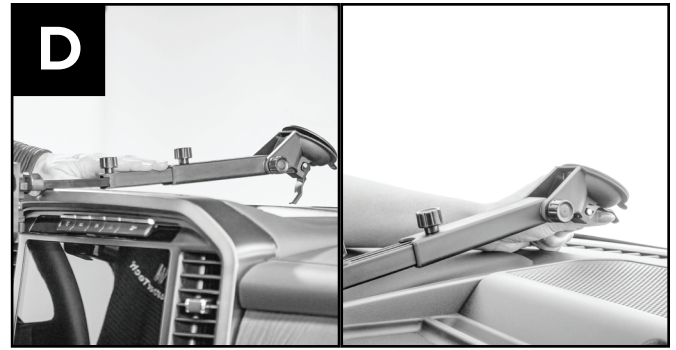

Once extended, for extra tension and stability, press down on the arm and then tighten Knob E while pressing the suction cup base up against the glass. Snap the lever into place and tighten knobs C and D.



To adjust the width of the phone holder, use Knob A.



To remove your phone, place thumb and forefinger on either side of the Quick Lock & Release tabs and press.

Ensure all knobs are secured prior to use.
Note: Please check state and local laws prior to use.

LET'S TALK
800-441-6287 or 630-769-1500
For warranty information, please visit www.WeatherTech.com/warranty



Made in USA

© 2023 MacNeil IP LLC V2

67WF1