


**"Our Customer's Life Depends on It"™**

*Removing the Existing Detent System (Depicted with PNVG Goggle)*

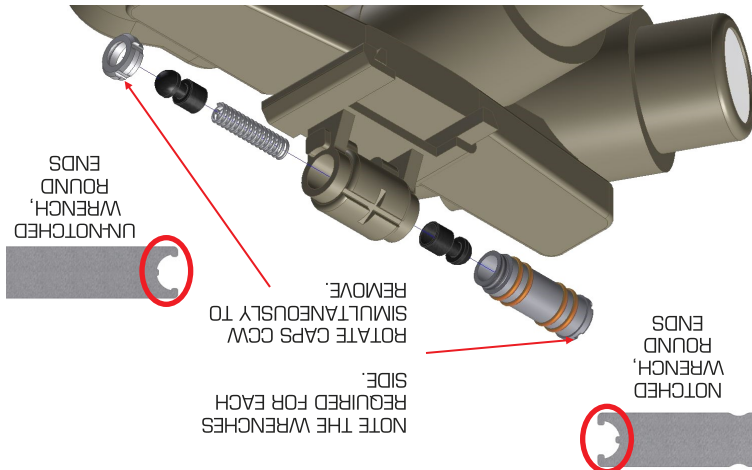

Holding the rounded ends of the supplied spanner wrenches on both sides of the NVG, remove the collars by simultaneously rotating CCW.

#### STEP 1 - Remove the Existing Detent System

The Wilcox Detent System is provided to convert existing plastic FGS and GPNVG detents to Stainless Steel for use with the Wilcox helmet mounting system. The new detents provide decreased wear and added durability during operation.

#### CONFIGURATION

#### STANDARD LIMITED WARRANTY

For full warranty terms, contact Wilcox Customer Service at 603-431-1331.

#### WARRANTY CLAIM AND SERVICE INFORMATION

Wilcox must be contacted in the United States at (603) 431-1331 to assign a **Return Merchandise Authorization (RMA) / Service Call Number (SC)** prior to return shipment.

After an RMA/SC number is provided, Wilcox will accept a package at the address below, clearly marked with the number assigned as follows:

**Wilcox Industries Corp.**  
RMA # \_\_\_\_\_  
25 Piscataqua Drive  
Newington, NH 03801

The product must be securely packaged, accompanied by purchasing information, a letter including sender's name, address, daytime phone number, date of manufacture, lot number and a description of the problem or work to be performed.

Manufactured by:  
**WILCOX®**

**Wilcox Industries, Corp.**  
25 Piscataqua Drive  
Newington, NH 03801-7816


Phone: +1 888-8WILCOX  
+1 603-431-1331  
Fax: +1 603-431-1221




**WWW.WILCOXIND.COM**

For troubleshooting service questions,  
contact Wilcox between 8am and 5pm EST.

NOTCHED SPANNER WRENCH  
(LARGER ROUND DETENT, USED FOR PLASTIC CAPS)

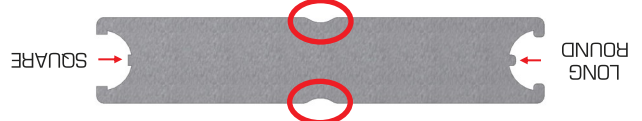

UNNOTCHED SPANNER WRENCH  
(SMALLER ROUND DETENT, USED FOR METAL CAPS)

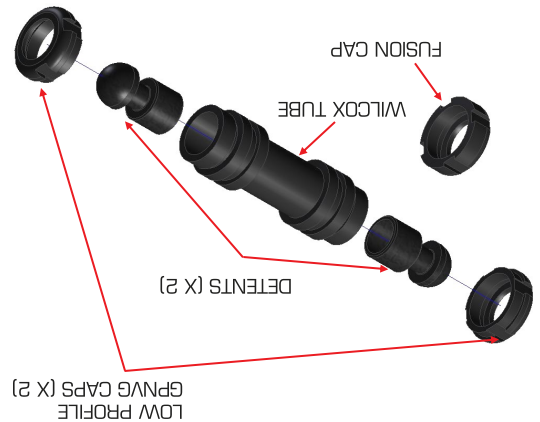

#### PRODUCT IDENTIFICATION

OPERATION AND MAINTENANCE  
INSTRUCTIONS FOR THE

**WILCOX®**

**Detent Conversion System**  
**for FGS and GPNVG Night Vision Goggles**  
**CAGE: 004F1**

**(UNFOLD FOR EASY READING)**

*Mount Up!®*




**Kit - Detent System - GSGM NVG**  
**(PN 62106G01)**




© 2012-2022 Wilcox Industries Corp. All rights reserved. Printed in USA. Wilcox's *Detent Conversion System for FGS and GPNVG Night Vision Monoculars* is Patent Pending. Wilcox®, Wilcox "X" Logo, and "Mount Up!" are federally registered trademarks of Wilcox Industries Corp. "Our Customer's Life Depends on It" is a trademark of Wilcox Industries Corp. FGS and GPNVG are trademarks of Insight Communications Corporation. All other trademarks and registered trademarks in this manual are the property of their respective companies. Specifications and other data are subject to change without notice. **EAR99: Export license not required.**

**STEP 2 - Convert Spring and O-Rings to Wilcox Hardware**

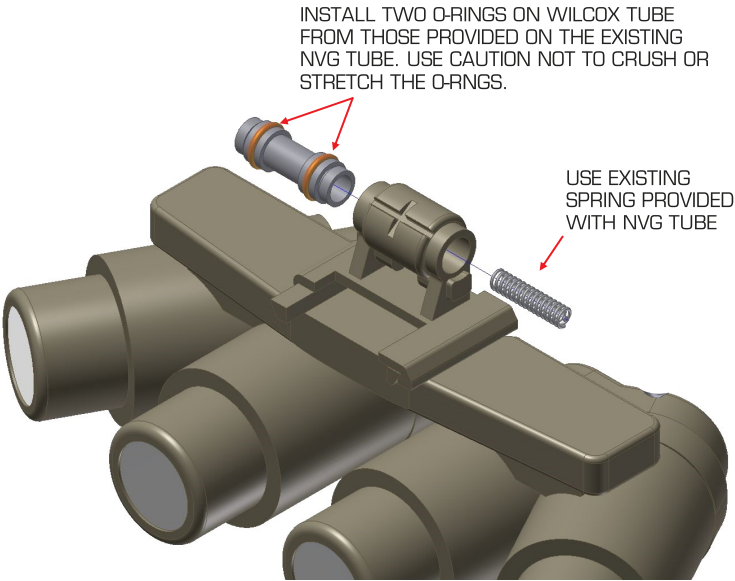


*Convert Spring and O-Rings (Depicted with GPNVG Goggle)*

**STEP 3 - Install Tube in NVG Housing**

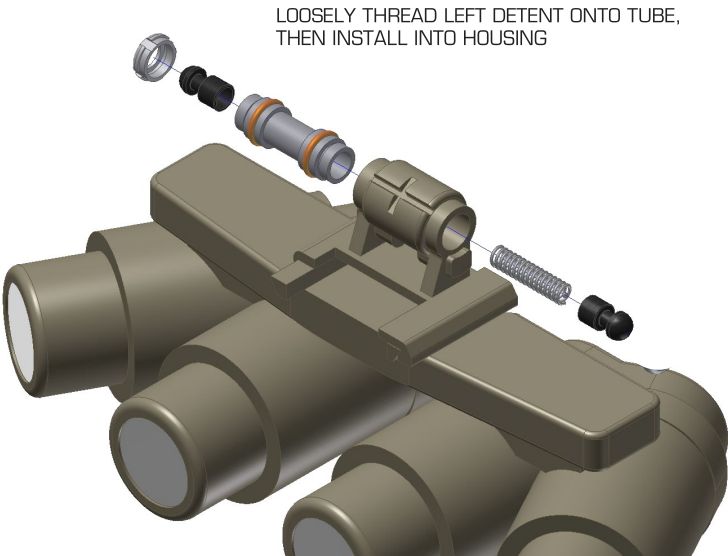


*Install Tube in NVG Housing*

**STEP 4 - Install Opposite Detent and Collar and Begin Threading Collar by Hand**

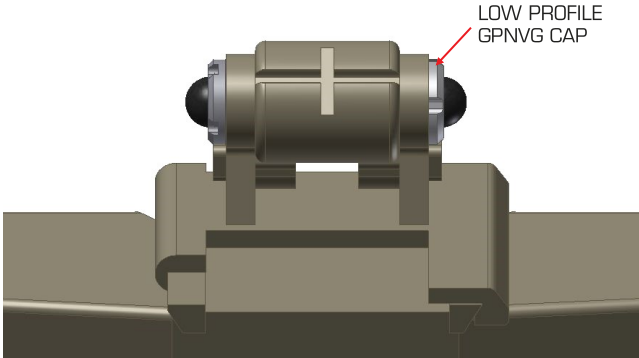

*GPNVG*

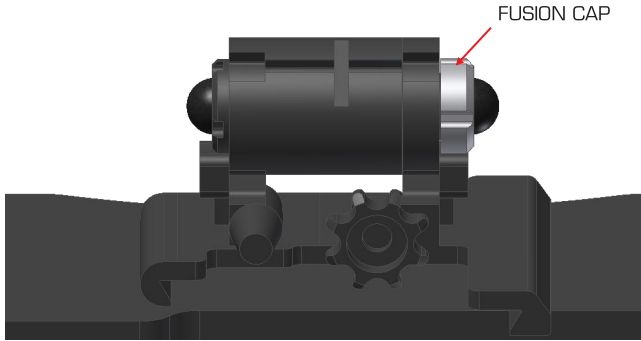


*Fusion Goggle System (FGS)*


*Install Opposite Detent and Collar*

**STEP 5 - Secure the Collar Ends**

Holding the square ends of the supplied spanner wrenches on both sides of the NVG, tighten the collars by simultaneously rotating CW.

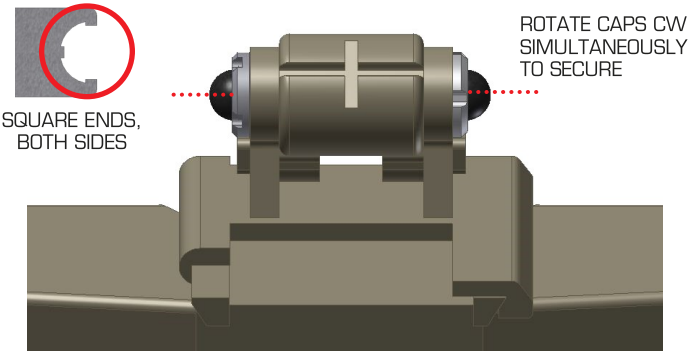

*GPNVG*

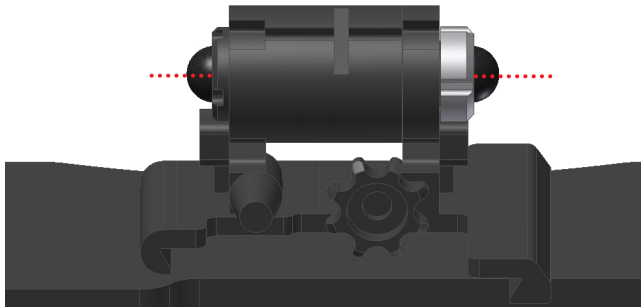

*Fusion Goggle System (FGS)*